





# ASSEMBLY INSTRUCTION

## opticalCON | LC Transceiver Adapter

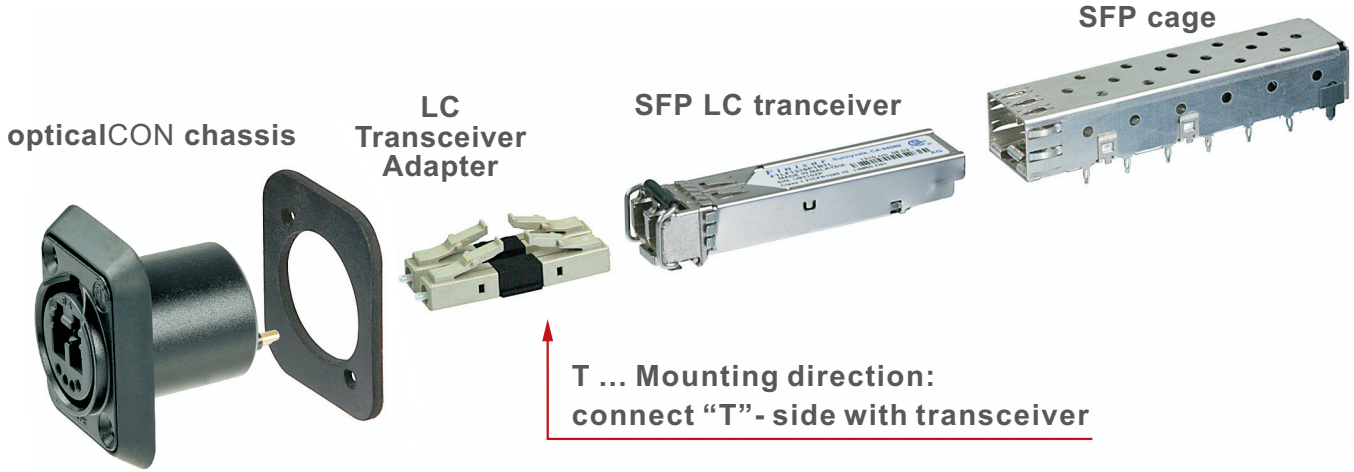

### SFP cage preparation:

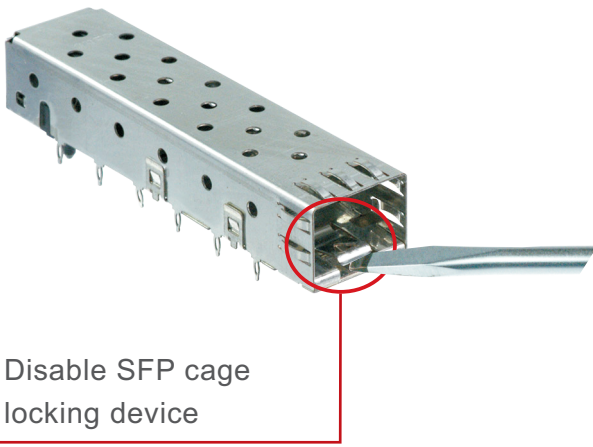

Disable SFP cage locking device


The SFP LC transceiver can be removed together with adapter and opticalCON chassis connector (e.g. repair) when the SFP cage locking device is disabled.

### **Assembly:**

Chassis connector > colored gasket > flat gasket > panel

### **Please note:**

Use of flat gasket depends on length X from LC-latch shoulder to rear of transceiver (see table below). Always use colored gasket. Fastening torque for mounting screws: 0.3 Nm

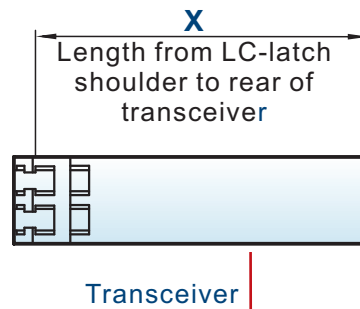

X = 50.3 mm - 51.2 mm	without flat gasket
X = 51.3 mm - 52.2 mm	with flat gasket 1 mm
X = 52.3 mm - 53.2 mm	with flat gasket 2 mm
X = 53.3 mm - 54.2 mm	with flat gasket 1 + 2 mm

Find detailed info on the customer drawing @ [www.neutrik.com](http://www.neutrik.com)

NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93  
 NEUTRIK USA Inc. USA T: +1 704 / 972 3050 F: +1 704 / 438 9202  
 NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439  
 NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131 / 280 830

NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511  
 NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796  
 NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052

Draft. Nr.: BDA 232 / 3102M1701 | Update: 12.06.2012 | Data subject to change without prior notice. ©2012 NEUTRIK®. ALL RIGHTS RESERVED. NEUTRIK® are registered trademark.